



10/2024

Canadian Timber Sierra Outdoor Shower Assembly Instructions



Requirements:

- 2 People (recommended)
- Tape Measure
- Cordless Drill
- Robertson Drill Bit
- $\frac{3}{4}$ "(19mm) Nut Driver Bit

Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com

Canadian Timber Sierra Outdoor Shower Assembly Instructions

Parts List

<u>Part #</u>	<u>Description</u>	<u>Quantity</u>
620410	2"x 3"x 31" - Front/Back Floor Support	2
620411	2x3x28" Floor Joists	4
620412	1" x 6" x 31" - Floor Boards	5
620413	1" x 2 1/2" x 31" - Floor Boards	1
620414	1" x 6" x 15" - Shower Pillar Top Plate	1
620415	Assembled Sierra Shower Pillar Only	1
510SHARDWARE	Sunlight/Sierra Shower Hardware Package	1
720400	Stainless Brackets to Mount Pillar	2
510SMANUAL	Sunlight/Sierra Shower Owners Manual	1

Options

720404 Economy Shower Hardware (Cold Water Only)

720405 Premium Shower Hardware

603022 Single Towel Hook - White Cedar



**720404
Economy Shower
Hardware
(Cold Water Only)**



**720405
Premium
Shower
Hardware**



**603022
Single Towel Hook
(White Cedar)**

Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com

Canadian Timber


Sierra Outdoor Shower Assembly Instructions



Locate the shower pillar top plate and secure it to the top of the assemble pillar assembly with 1 ½" (38mm) screws ensuring it is even on both sides.



Secure the front/back floor supports to the 2 outside floor joists with 2 - 2 ½" (64mm) screws in each corner.

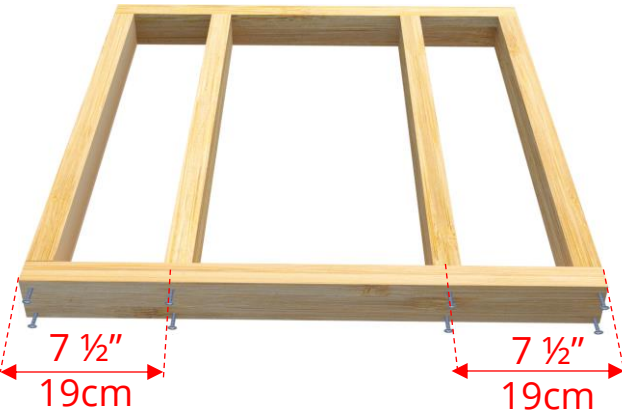

Measure 7 ½" from each end and center the inner floor supports and secure with 2 - 2 ½" (64mm) screws in on each end.

**** It is important these are measured correctly as the shower pillar will bolt into these supports.***



Space the floorboards out evenly over the base and secure into each of the floor joists using 2 - 1 ½" (38mm) screws into each joist.

Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com

Canadian Timber

Sierra Outdoor Shower Assembly Instructions



Position the assembled pillar centered and flush to the back of the shower base.



Secure the assembled pillar to the base with the provided lag screws and brackets.

**** It is recommended to predrill these holes first to prevent splitting.***

Congratulations on the assembly of your Canadian Timber Sierra Outdoor Shower!

Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com



WARRANTY

Leisurecraft warrants our products in the Canadian Timber Collection against defects in materials and workmanship under normal/residential use for a period of three (3) years, as applicable, from the date of receipt of the product by the original end-user consumer.

This warranty does not apply to normal wear and tear and/or natural weather conditions. This warranty does not cover regular required maintenance, (e.g. cleaning or staining the shower)

This warranty does not cover misuse or negligence and the manufacturer, and associated retailers are not liable for any injury or damage caused by the product.

This warranty is a parts only warranty and any service or labor costs would not be considered as part of the 3-year warranty.

Purchaser Name: _____ Date: _____

Purchased From: _____

Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com